


**SOLAR FENCE  
KIT LIGHTS**  
( Model SFLPL4 / 12 )

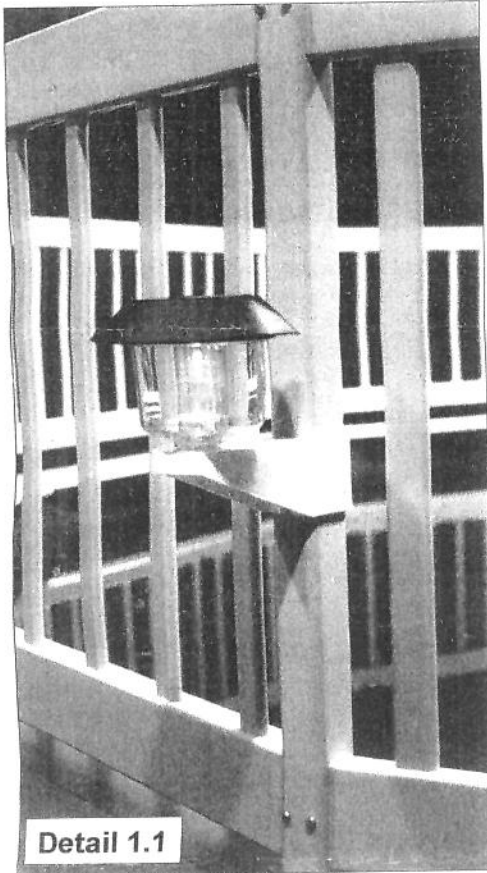

Detail 1.1

Required:




Pencil

Screw-  
driver

Drill

Tape Measure

Included:

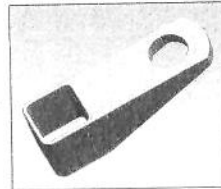

Light Bracket




Solar Light




Screw

1. Identify parts. With pool fence post in place (secured to pool), slide solar light bracket over post and down to desired location. We recommend the light be installed outside of pool fence (exterior of pool) and between top and bottom rails of fence (see Detail 1.1 & 1.2)

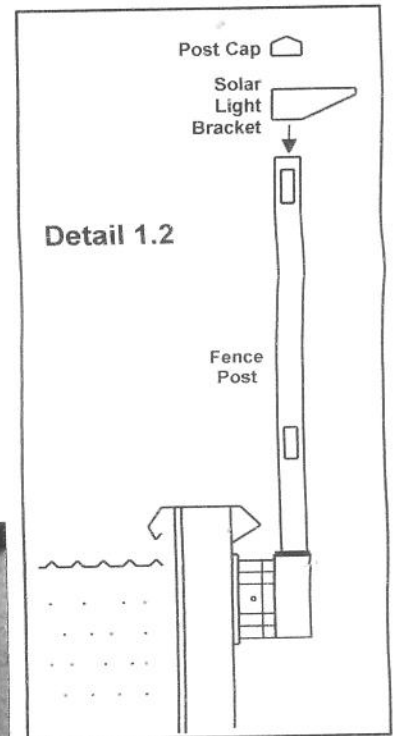


Detail 1.2

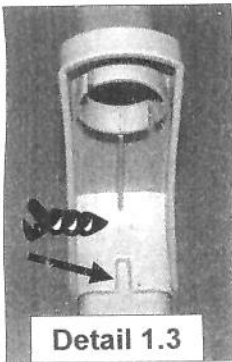


Detail 1.3

2. Once solar light bracket location is chosen, secure in place using stainless screw provided. Mark screw location & pre-drill hole using 1/8" drill bit. Make certain to use caution when using power tools around water. Secure bracket in place with screw (Detail 1.3)

3. Fit solar light into bracket. Gently press down to secure in place, making certain it is tight (see Detail 1.4 & 1.5)

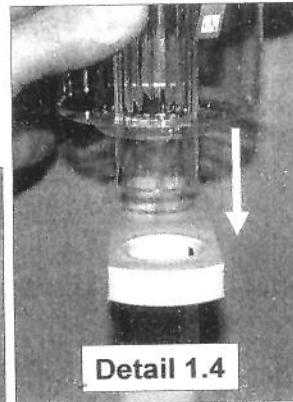


Detail 1.4

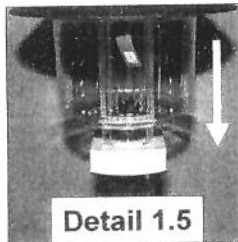

Detail 1.5



Detail 1.6

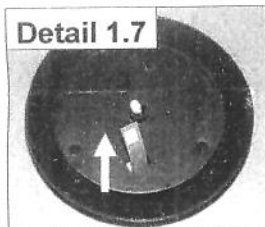

Detail 1.7

2. Remove light top to activate. Turn black lid counter-clockwise and remove. Pull battery protective strip out to activate. Put your hand over solar cell on top to see if light works (battery may require to be charged). Replace lid securely. If replacing battery make certain to dispose of environmentally (see Detail 1.6 & 1.7)



**SEND US YOUR PHOTO !**

Each season we select prize-winning installations. Send your high resolution image today - visit our website for more details



877-846-9595

[www.vinylworkscanada.com](http://www.vinylworkscanada.com)