

YARDGUARD



Install Battery	3
Auto Battery Check	4
Mount On Wooden Fence	5
Mount On Metal Gate	6
Mount On Wall And Glass Doors	7
Additional PASS/RESET Switch	8
Operation	9
Automatic Reset Under All Conditions	10
Auto Siren OFF	11
Automatic Continous Monitoring	11
IMPORTANT	12

Welcome

Congratulation on purchasing this **YARDGUARD** safety alarm. The **YARDGUARD** can be used to monitor potential dangerous areas, and provides a high volume alarm/alert when children enter these areas. It can be used indoors or outdoors, mounted on a wooden fence or metal gates. It can be mounted on any doorways or openings that lead to potentially dangerous areas.

Caution

The alarm siren is very loud. Never place the unit close to your ear. Prolonged exposure to the loud siren can affect your hearing.


Install the unit at minimum height 54", high enough to be out of reach of children.

This **YARDGUARD** is an entry monitor device. Whether expressed or implied, it cannot replace any safety device. All safety precautions should be maintained, including parental supervision.

Neither SmartPool Inc. nor anyone else who has been involved in the creation, reproduction or delivery shall be liable for any direct, indirect, consequential or incidental damages arising out of the use or liability to use the **YARDGUARD**.

Install Battery


Before installing the battery, use a rubber band to hold the magnet sensors together temporarily, with dot matched to dot, thereby preventing the alarm from sounding after the battery is installed when mounting the unit.

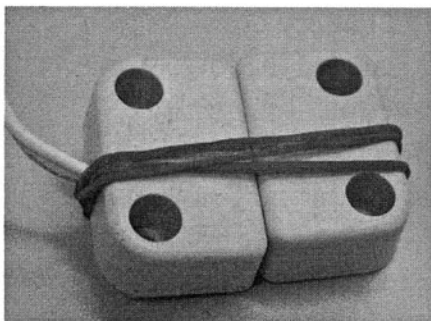


To install battery, remove the four screws at the back, then open the battery door.

Install a fresh 9V battery (not included) into the battery compartment. Check the polarity.

Close the battery door and tighten up the four screws.

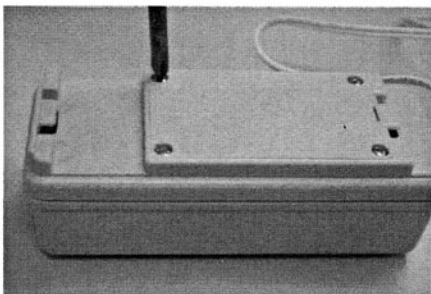

Now the unit is ON and in working mode. To check if battery is installed properly, press the battery check button located at the lower right corner. The unit will beep when you press this button. If no beep sound is heard, check the battery installation again, or replace with a new battery.

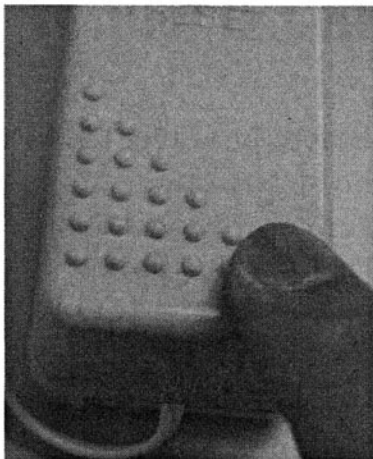


Auto Battery Check

The unit will keep monitoring the battery level. When it detects that the battery is low, you will hear a loud and short beep every minute. Change battery when you hear this beep.

**Check battery periodically.
Change battery a minimum of
once a year.**


Mount On Wooden Fence

Install the mounting bracket onto fence post using the two bigger screws. Slide the alarm unit onto this

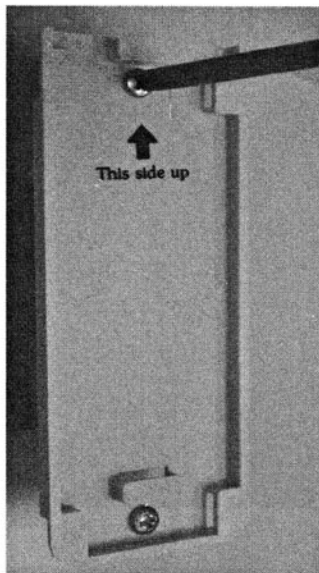

mounting bracket. You will feel a click when the unit is properly installed.

Mount the two magnet sensors onto fence post, one on each side, using the four smaller screws.



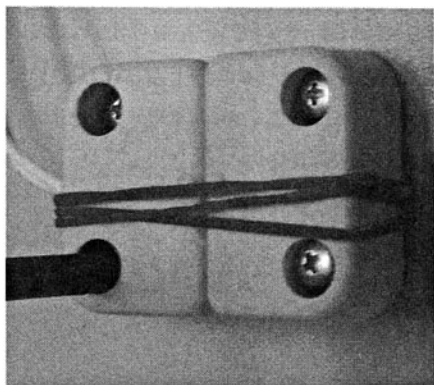


Mount On Metal Gate

Install the mounting bracket onto gate post using two nylon straps. Slide the alarm unit onto this mounting bracket. You will feel a click when the unit is properly installed.

Mount the two magnet sensors onto the two spacer stands using the four

smaller screws and then mount this sensor assembly onto gate post using the nylon straps.

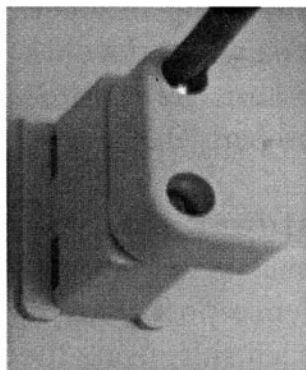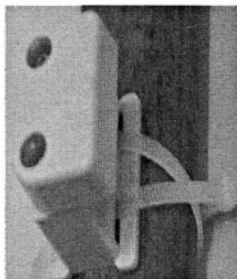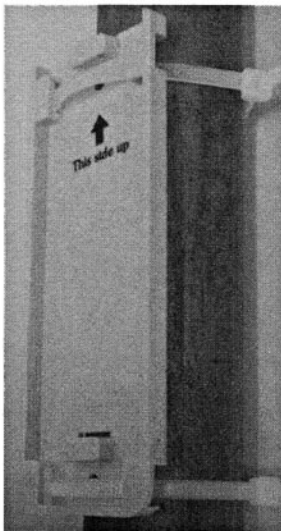


Mount On Wall And Glass Doors

Install the mounting bracket using two pieces of double sided foam tape. Slide the alarm unit onto this mounting bracket. You will feel a click when the unit is properly installed.

Apply the double sided foam tape onto the bottom recessed area of magnet sensor pair. Mount the magnet sensors, one on the door and the other on the door frame.




Mount the magnet sensor with the wire onto the stationary surface such as door frame.

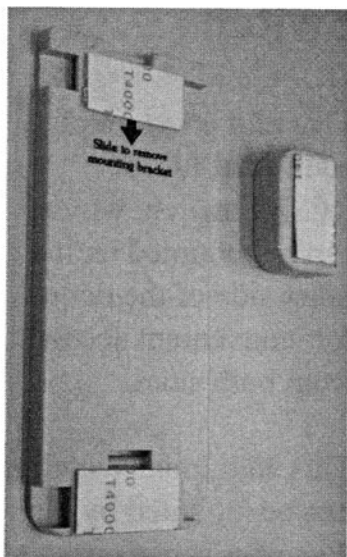

Additional PASS/RESET Switch

This unit provides an additional PASS/RESET switch, which can be mounted on the other side of the door for convenient access from both sides.


This additional switch can be mounted by the 2 smaller screws or double sided foam

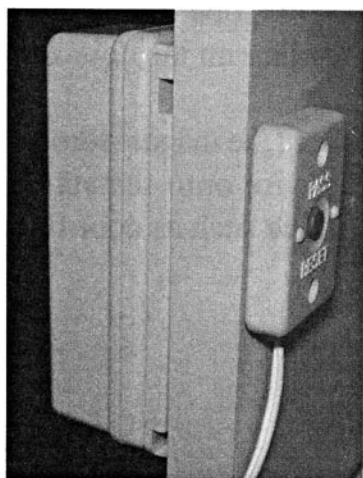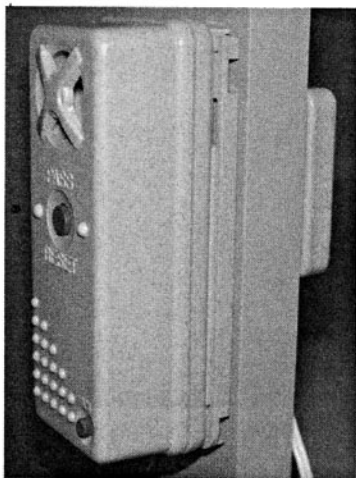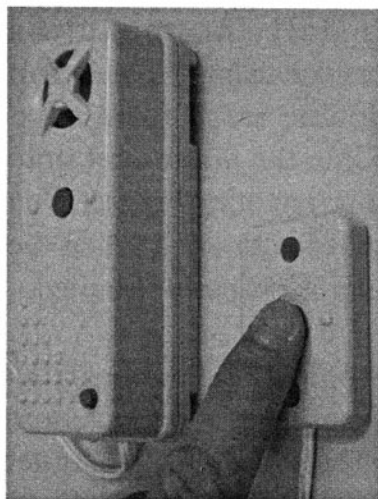


Operation

This **YARDGUARD** is designed to monitor the opening of gate or door, to alert an adult if a child has opened a gate or door to a potential dangerous area.

Check the battery. Press the **CHECK** button should give a loud beep, otherwise replace with a new battery. The unit will give a loud siren if gate or door is opened by more than one inch.

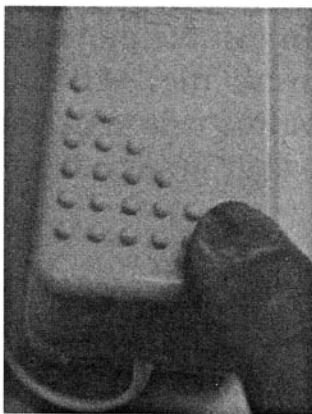

For adult entry, press the **PASS** button. The unit will allow the door be opened up to 7 seconds without triggering alarm. However, if the gate or door is opened for over 7 seconds, the alarm will trigger.

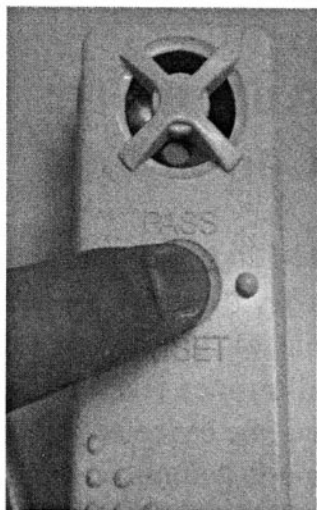

To reset the alarm, first close the door and then press the PASS/RESET button. The alarm is now back to stand by mode.

To exit the protected area, press the PASS/RESET button and exit the area within 30 seconds.



Automatic Reset Under All Conditions

The unit will be reset automatically in 30 seconds after the last key activation. If the PASS/RESET button is pressed but the adult entry 7 seconds allowance is not utilized, this adult entry allowance will be canceled in 30 seconds, and reset to stand by mode automatically.

Auto Siren OFF

Siren can be turned OFF manually as describe on previous section, or the unit will reset in 4 minutes automatically if the gate is closed.

Automatic Continous Monitoring

If alarm is triggered and reset by itself in 4 minutes, the unit will check the condition of magnet contact sensor to decide if the door remains open or not. If the door is left open, the alarm sounds again for 4 minutes, check the door condition again and continue the cycle until the door is closed.

IMPORTANT

Install the unit at minimum height 54", high enough to be out of reach of children

Keep the distance between the two pieces magnet sensor contacts to a maximum of 3/4"

Test the unit by opening the door. The alarm should go off immediately. Otherwise contact SmartPool Inc. at 877-799-7665.

Do not rely on the alarm until the test results are satisfactory.

