

# STEP WEIGHT SYSTEM

### **INSTRUCTION MANUAL**

**NE1129** 

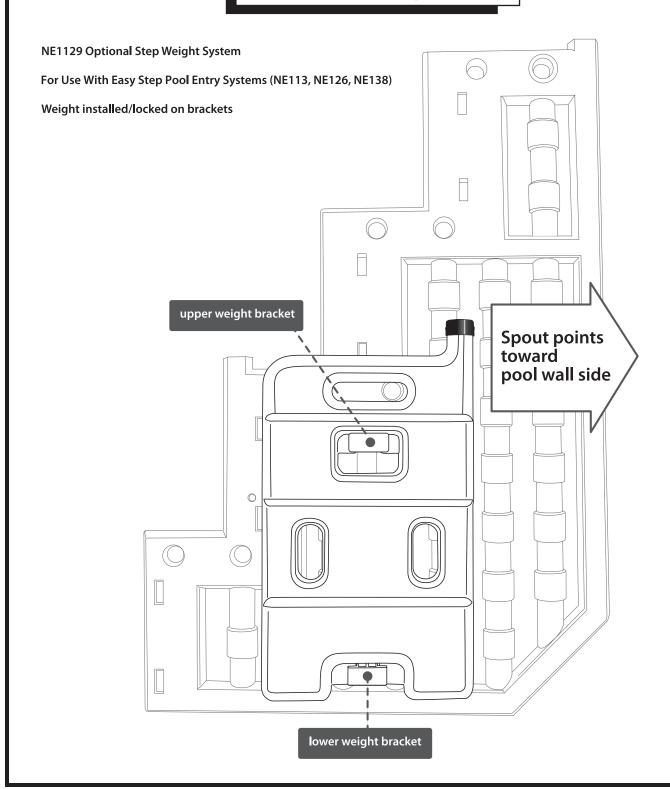


#### **PARTS LISTING**

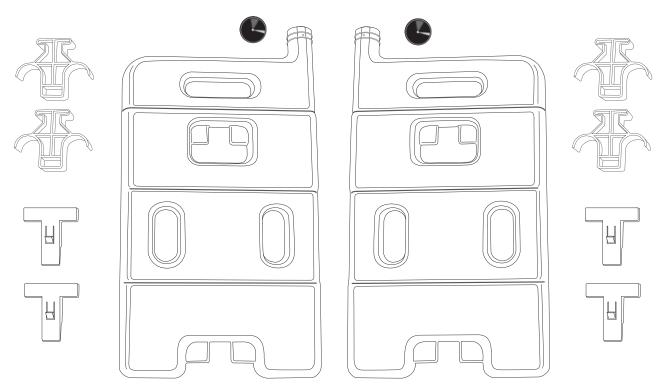

- Each Step Weight System includes the following parts:
- 2 Side weights
- 4 Weight brackets
- 4 Weight bracket locking T's
- 2 Weight fill spout caps


# STEP 1

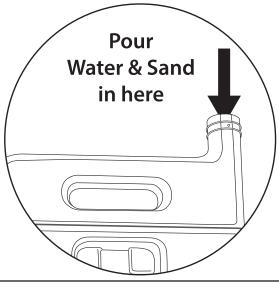


 Fill each of the 2 side weights with sand. This is what gives the weight system it's weight. First pour approximately 10 ounces of water into the step. Then pour filter sand into the spout until it is full.

**NOTE** The water you first poured in should run out over the top of spout as the weight fills with sand, this is normal and is necessary to remove any air inside the weight

 Place the caps onto the spout on each weight. The caps will keep the sand from coming out of the weight during the installation process as well as during normal use.

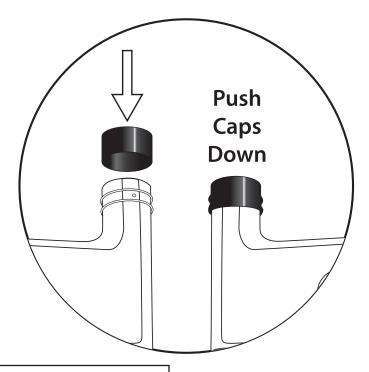


# STEP 2

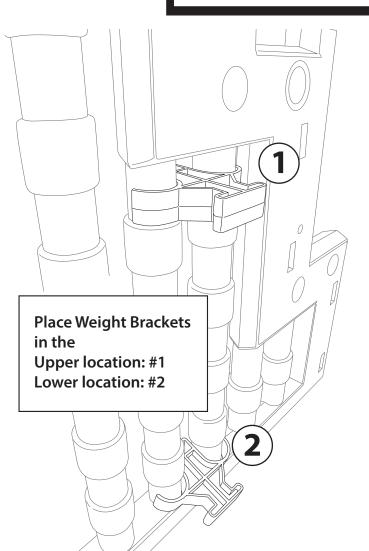

 Attach the weight brackets to each side of your pool step.
The brackets slide in between the side posts under the 3rd step on each side of the step.

#### STEP 3

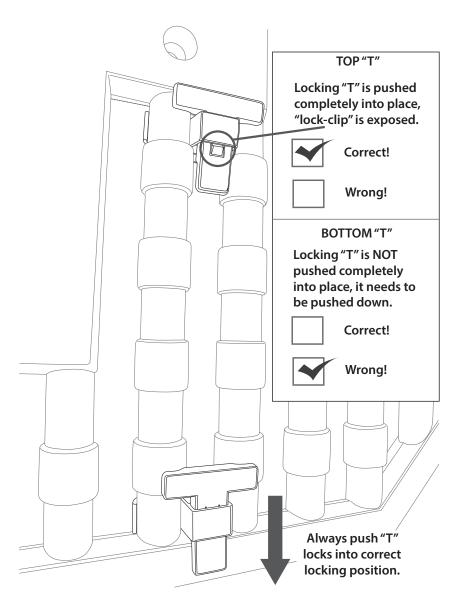


 To lock the weigh brackets in place you must use the locking T's. Simply slide the locking T through the square hole in the bracket that is protruding through the step side inside the step. Push the "T" all the way down until it locks in place.

#### STEP 4

 Place your pool step into your pool. (Follow install instructions in your step manual)

## STEP 5

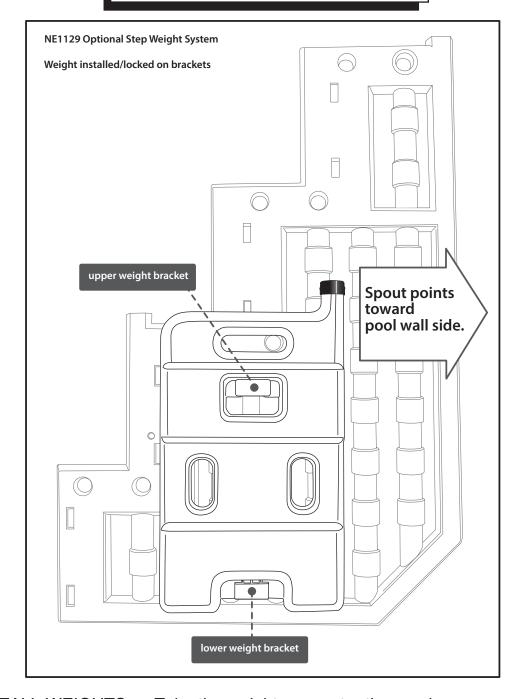

- INSTALL WEIGHTS Take the weights, one at a time and carefully place the weight onto the 2 weight brackets. The square opening in each side weight will accept the weight bracket.
- Be sure to have the spout of the step towards the rear (pool wall side) of the step.
- Once the weight is in place, carefully push it down until it locks onto the weight bracket. Now the weight is secure.
- Repeat this procedure for the second weight.
- To remove your pools step at the end of the summer season you **MUST REMOVE THE STEP WEIGHTS FIRST**. To do this simply lift each weight straight up until it is unlocked from the bracket and then remove the weight from the pool.