pool rules

NOTE: FOLLOW ALL POOL EQUIPMENT MANUFACTURER'S RECOMMENDATIONS FOR WINTERIZATION.

Drain Pool Plumbing of All Water

- 1. Fully open all pool system valves.
- 2. Temporarily drain the pool to a level below the lowest inlet fitting. This should allow water to drain from all lines.
- To remove residual water, blow out the lines by attaching a blow-out plug to the water intake fitting and applying air pressure.

Drain Equipment Plumbing of All Water

- Remove all drain plugs located on the hair and lint pot of the pump, filter tank, selector valve, heat exchanger, etc. Be sure to remove both front and rear plugs from the heater header.
- 5. Coat drain plugs with waterproof grease.
- 6. Replace drain plugs after all water has drained from the system.
- 7. Remove, drain and store the skimmer, pump strainer basket and filter pressure gauge.
- 8. Plug the inlet and skimmer with winterizing plugs.
- 9. Return the pool to its recommended winter water level
- Add Antifreeze to the System NOTE: NEVER ADD ANTIFREEZE TO THE CHLORINATOR
 - Add Swimming Pool Antifreeze to the pool's plumbing lines. A hand pump is recommended to pump antifreeze into the system.
 - Remove pressure relief valve or plug on the top side of front heater header. Add antifreeze. Replace Fitting.
 - 12. Add a few inches of antifreeze directly to the skimmer.

24 Hour Emergency Response 1-800-535-5053

Camco Manufacturing, Inc.

121 Landmark Drive / Greensboro, NC 27409 Made in USA 1-800-334-2004 / www.camco.net

For Position Only. Printer to place in actual barcode based on this number.

All ingredients are listed in the U.S. Federal Register. This product is considered GRAS (Generally Regarded As Safe) by the Food and Drug Administration.

Please Read Carefully:

- This product should not be used in an automobile radiator or boat engine.
- Not for use in closed boiler systems or solar collectors. See the manufacturer of those items for their recommendations.

To De-Winterize the system: Swimming Pool Antifreeze presents no toxic hazard to swimmers nor should it create problems for routine chemical maintenance.

Swimming Pool Antifreeze should be drained from pool equipment before returning it to service. It is not necessary to drain antifreeze from pool plumbing lines.

AF Antifreeze Requires	PVC Pipe Size	Per 10' Pipe	
	1*	1/2 Gallon	
	1-1/4"	3/4 Gallon	
	1-1/2"	1 Gallon	
	2"	1-3/4 Gallon	

Freeze Protection Chart

Burst Protection	Antifreeze	Water
-100° F	1 (Part)	None
-75° F	1 (Part)	1 (Part)
-50° F	1 (Part)	2 (Parts)
-40° F	1 (Part)	3 (Parts)
0° F	1 (Part)	4 (Parts)

30054

609